

USER MANUAL

Chimney

Please read the user's manual carefully

TABLE OF CONTENTS

Introduction.....	3
Safety Precaution.....	3
Machine Overview.....	4
Product Dimension	4
Do's and Don'ts	4
Installation Instructions.....	5
Operating Instructions	6
Auto Clean	7
Environment Protection.....	7
Maintenance.....	8
Troubleshooting	8

Thank you for choosing our Chimney.

- This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.
- In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage.
- The Chimney uses high quality materials, and is made with a streamlined design. Equipped with large power electric motor and centrifugal fan, it also provides strong suction power, low noise operation, non-stick grease filter and easy assembly installation.

 
SAFETY PRECAUTION

- Never let the children operate the machine.
- The Chimney is for home use only, not suitable for barbecue, roast shop and other commercial purposes.
- The Chimney and its filter should be cleaned regularly in order to keep in good working condition.
- Clean the Chimney according to the instructions manual and keep the unit from danger of burning. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Forbid the direct baking from the gas cooker
- Please keep the kitchen room a good condition.
- Before connecting this appliance check that the power supply cord is not damaged. A damaged supply cord must be replaced by qualified service personnel only.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels;
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels:
- Regulations concerning the discharge of air have to be fulfilled.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not flambe under the range hood.
- **CAUTION:** Accessible parts may become hot when used with cooking appliance.


Electrical Shock Hazard

- Only plug this unit into a properly earthed outlet. If in doubt seek advice from a suitably qualified engineer.
- Failure to follow these instructions can result in death, fire, or electrical shock.

MACHINE OVERVIEW

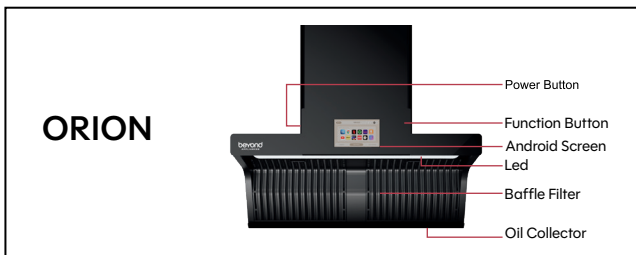

PRODUCT DIMENSIONS (mm)

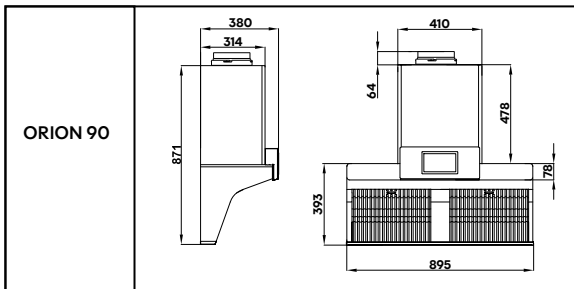 

Don'ts

1. Do not lift the chimney by holding the hood cover.
2. Be cautious while handling the chimney, any impact on the chimney by hard surface will lead to scratches or breakage of glass.
3. Before letting the chimney to hang ensure both the hooks are engaged to the slot of the chimney.
4. Ensure there is no leakage of air around the joints and any where on the outlet duct.
5. Ensure the butterfly valve on the exhaust socket are not blocked by any method of duct installation.

Do's

1. Install the chimney as per the installation guideline document.
2. Give chimney training to the customer
3. Install the perforated tray and oil tray back onto the chimney after installation.
4. Use a leveler while installing hanging panel on the wall.
5. Route the power wire neatly

INSTALLATION INSTRUCTIONS

Choose the type of drill bit according to the material of the wall. (All dimensions mentioned below are in millimetre)

1. PREPARE FOR INSTALLATION:

If you have an outlet to the outside, your Chimney can be connected as in the below picture by means of an extraction duct (enamel, aluminum, flexible pipe, or inflammable material with an interior diameter of 150mm



 
- b. Before installation, turn the unit off and unplug it from the outlet.

2. INSTALLATION (VENT OUTSIDE)

Attention! Observe the warning in the instruction sheet concerning the operation of " appliance when air is discharged from the room.. When the range hood and appliance supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} Bar)

Drill 4 x 8mm holes to accommodate the bracket. Screw and tighten the bracket onto the wall with the screws & screw plugs provided.

- Lift up the Chimney and hang onto the wall bracket hook.

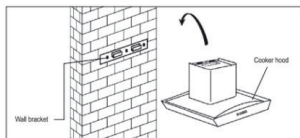

- Fix the one-way-valve to the air outlet of the Chimney. Then, attached the exhaust pipe onto the one-way-valve as shown below.



OPERATING INSTRUCTIONS ANDROID

BLDC



Modes and Speeds - Operation varies by your chimney mode

UI Control: Smart ON Activation When the ON button is pressed, the chimney automatically starts at Speed Level F5 (Optimal Performance Mode).

Smart Speed Adjustment - Turbo Mode: Instantly activates High Speed Level - F9

Whisper Mode - Activates Low Speed Operation

Chimney Light - On/off

✱ Low Mode - Soft ambient lighting

✱ Medium Mode - Balanced brightness

✱ High Mode - Maximum illumination

Auto off - Countdown starts and on the end of it, the chimney suction turns off.

Timer - You can use this timer while cooking your dishes

Task Bar - This includes time, Brand logo, Wi-Fi settings, communication status, auto clean, settings.

Entertainment Apps: Built-in access to entertainment apps Watch YouTube, Netflix, Spotify & more while cooking.



App and More

- This section of UI brings to you your favourite apps that keeps you entertained, informed and helps you in shopping and more



Chef Connect

- Chef Connect-Unfolds 400+ professional food recipes at your fingertip.
- Notes, Grocery App, Reminder - helps you take down notes, order grocery and set up reminders
- LPG Reminder - Allows you to set reminder for gas booking

Auto-Clean

A unique "Auto-Clean" function has been provided in this Chimney. This Chimney comes equipped with an oil collector tray. During cooking, the excess oil and dirt which gets sucked into the Chimney gets drained into this oil collector. However, over time, some traces of stubborn grease and oil can get stuck inside the Chimney

In order to eliminate this stubborn grease and clean the cook hood from the inside, we have designed this unique feature. This new generation auto-clean function works with the help of a specially designed heating element fixed within the hood. Please make sure that the Chimney is in a standby mode. Now start the "Auto-Clean" function. The heating element will turn on for a set amount of time and then the fan will automatically start operating at low speed for the balance time. Most of the grease present within the Chimney will get evaporated and blown out of the air outlet. Any remaining grease will get drained out into the oil collector tray, located at the back of the filter. Drain the collected grease into a sink and clean the oil collector tray with a soft cloth. Fix the oil collector tray back in its place by sliding it in the rails at both ends. Ensure that the tray is fixed properly. Your Chimney is clean as new from the inside now

ASTERIA



Press this icon on home screen -> press start auto clean button

After 15 minutes the auto clean will be turned off automatically, any need to turn off auto clean before completion use (stop icon).

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of the product.

The symbol on the product indicates that this product may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about the treatment, recovery, and recycling of this product, please contact your local city office, your household waste disposal service, or the shop where you purchased the product.

MAINTENANCE INSTRUCTIONS

Before cleaning switch the unit off and pull out the plug.

1. REGULAR CLEANING

Before cleaning, ensure the unit is switched off and unplugged.

- Use a soft cloth dampened with warm, mildly soapy water or a gentle household detergent.
- Avoid using metal pads, harsh chemicals, abrasive materials, or stiff brushes to prevent damage.

2. Monthly Cleaning for Perforated Sheet:

IMPORTANT: Clean the filter every month to prevent fire hazards.

- The filter traps grease, smoke, and dust, which directly impact the chimney's efficiency.
- If left uncleaned, grease buildup can become a fire risk.
- Clean the filter using a mild household detergent for optimal performance

TROUBLESHOOTING

Issue	Solution
Button not responding	If chimney functions are unable to use 1.Check if display is on 2.Restart the chimney 3.Call customer care
No sound is emitted from speakers	1. Check the volume level 2. Check is the power supply on 3.Call Customer care
Function button not responding	1.Check whether main power supply is on 2.Restart the chimney 3.Call customer care
No Display	1.Check main power supply 2. Tap the power button and check 3.Call Customer care



For Service and Installation:

Call us at 08043628277 or

WhatsApp us at +91 8105208433.

BYONDNXT SMART HOME PVT LTD

545/15, survey 13, 15, Hosur Rd, Bommanahalli,

Bengaluru, Karnataka 560068

+91 97314 14858/www.beyondappliances.in